


Table-top Dataweigh™ (Multi-head Weigher)

TDW-205W

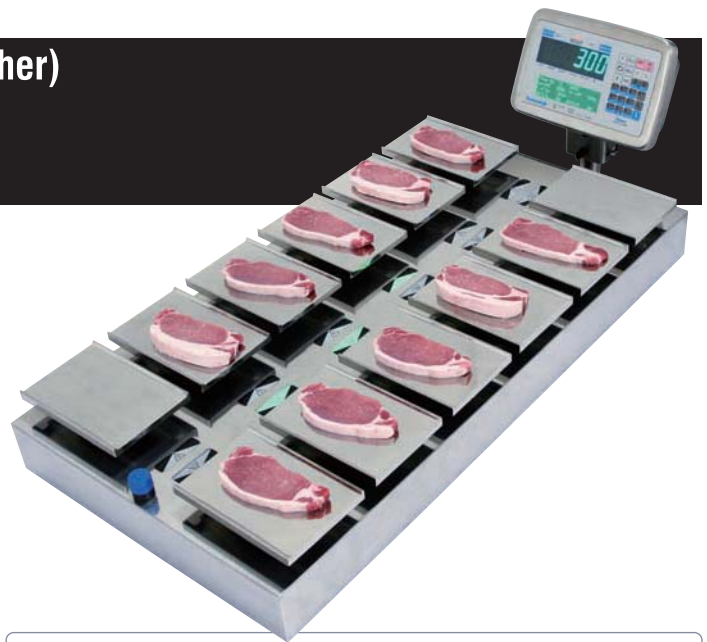

FEATURES

- 1** Securing from weight shortage in fixed weighing work
- 2** Jumping up the production speed for fixed weighing work
- 3** Improving the weighing quality and reducing give-away (yield)
- 4** Waterproof IP65, Stainless Steel Construction
- 5** Priority Head Combination Function
This is the function that the selected weigh head as a priority head always joins the combination.
- 6** Weight & Quantity Combination Function
This is the function that one combination is made by the pre-determined number of weigh heads.
- 7** Unit Weight Setting Function
In order to remove irregular sized items, the lower and upper limits of the unit weight can be set in advance.
- 8** Production Goal Function
The combination work will automatically finish when the goal, the pre-determined number of packages is achieved.
- 9** Special Trays as a tailor-made option.

Special Trays (example)




V-Shaped Tray

U-Shaped Tray

Long Tray

The TDW-205W enables even amateur workers to perform the fixed weighing work easily. This is an ideal combination scale to reduce waste (give - away or yield) and realize optimized inventory control.

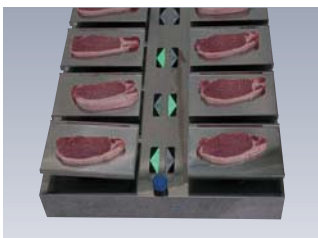

The fixed weighing work is performed only by picking up items from the trays with a green lamp.



INDICATOR

- Numerical entry is set easily by a numerical keypad.
- Max 100 items can be stored.
- Main display shows combination weight.
- Auxiliary display shows the setting values, the conditions, the status, etc.

SPECIFICATIONS

Model	TDW-205W
Weighing Capacity	3,000 g
Display Division	1 g
Combination Accuracy	0.1 g
Range of Combination	8 g to 18 kg
No. of Scales	12 Heads
No. of Stored Items	Max 100 items
Combination Speed	20 to 30 packs per minute
Platform Size	195(W) x 135(D) mm
Outer Dimensions	510(W) x 1,125(L) x 336(H) mm
Main Display	Fluorescent Tube Display, 32(H) x 14.6(W) mm
Auxiliary Display	Full Dot LCD Display, 64(H) x 240(W) mm
Net Weight	Approx. 40 kg
Operating Temperature	-10°C to 40°C
Dust/Water Protection	IP65
Functions	Weight Combination, Weight & Quantity Combination, Priority Head Combination, Automatic Recalculation, Scale Status Check, Scale Suspend, Proximity Combination, Production Goal function, Auto Zero, Remains Detection and One-touch Tare
Power	AC230V +10% to -15% 50/60 Hz
Options	Memory card, External scale (only 1 unit), Special trays, Heater inside main body

YAMATO SCALE CO., LTD.

5-22 Saenba-cho, Akashi, Japan 673-8688
 Telephone : +81(78)918-6157-6540
 Telefax : +81(78)918-5562
 URL : <http://www.yamato-scale.co.jp/>