


# SPC Series

# Digital Scale

The fastest, most efficient, and reliable way of "taming" your food costs.

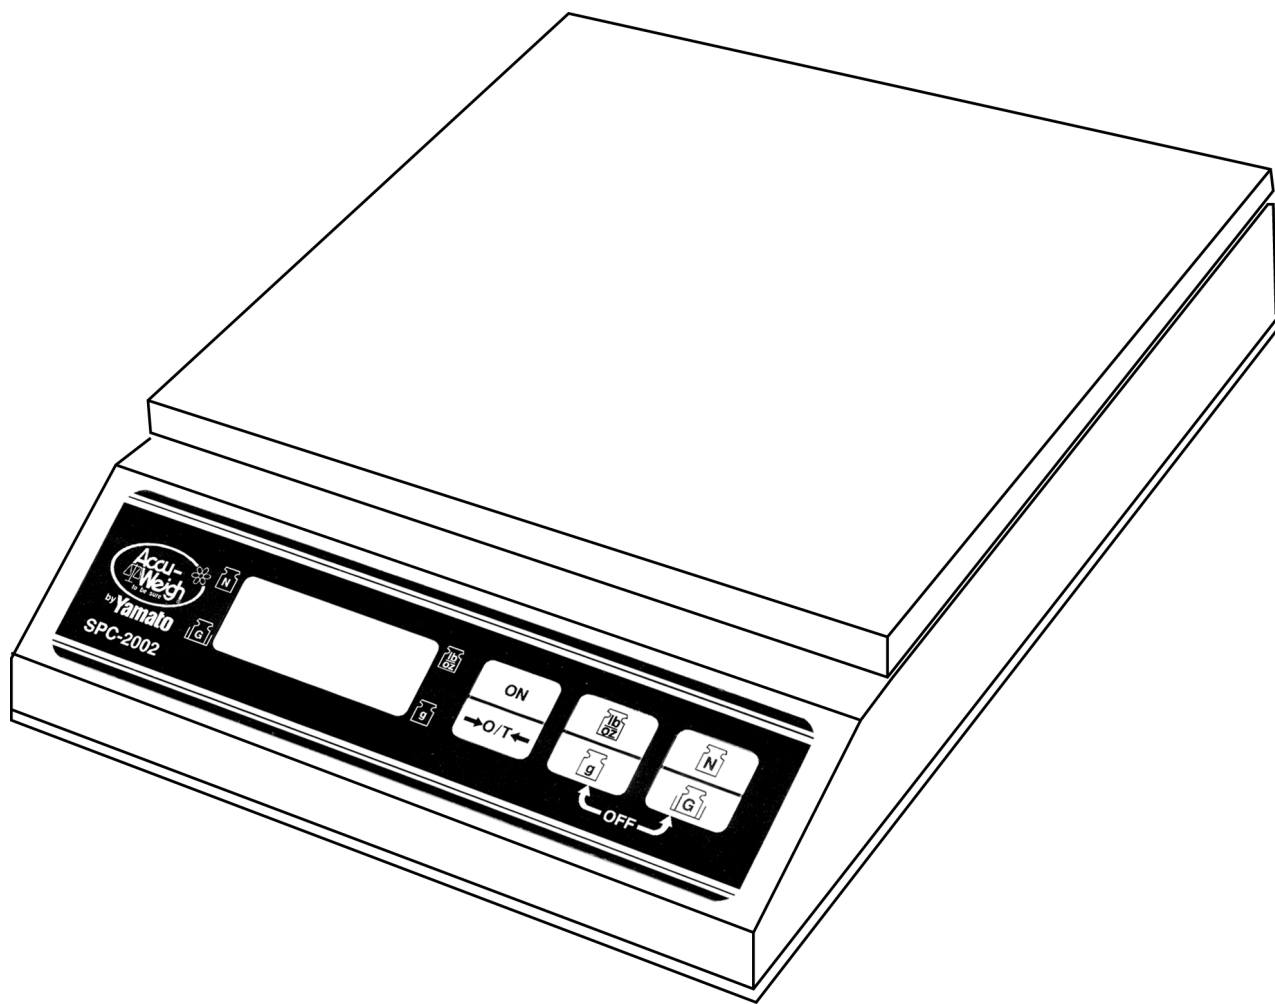

# Yamato

# SPC Series

# Digital Scale

## Electronic features

Microprocessor based, the circuitry and software of these fine scales provide an array of valuable functions, ALL STANDARD:

- Semi-automatic Zero Reset
- Zero tracking
- Motion Detection
- Choice of units of weight
- Display of Net or Gross weight
- Low battery indication
- Automatic off function

## Convenient battery or A/C Adapter operations (optional)

When used with 6 AA size alkaline batteries, the scale can be utilized anywhere. When the display value has not changed for 2 minutes, the scale is electronically "turned off" to prolong the life of the batteries. The A/C adapter (optional) provides complete flexibility of use.

## Real load cell performance

All models are equipped with a strain gauge load cell that provides the best possible accuracy, repeatability and linearity.

## Specifications

MODEL	SPC-2002		SPC-5005	
CAPACITY	4.5 lb / 2000 g		11 lb / 5000 g	
DIVISION	Low Range	High Range	Low Range	High Range
GRAM	0 - 1000g x 1 g	1000 - 2000 g x 2 g	0 - 2500 g x 2 g	2500 - 5000 g x 5 g
DECIMAL LB	0 - 2.2 lb x 0.002 lb	2.2 - 4.4 lb x 0.05 lb	0 - 5.5 lb x 0.005 lb	5.5 - 11.0 lb x 0.010 lb
DECIMAL OZ	0 - 35 oz x 0.05 oz	35 - 70 oz x 0.10 oz	0 - 88 oz x 0.1 oz	88 - 178 oz x 0.2 oz
LB / FRACTIONAL OZ	0 - 2 lb 3 oz x 1/8 oz	2 lb 3 oz - 4 lb 6 oz x 1/4 oz	0 - 5 lb 8 oz x 1/4 oz	5 lb 8 oz x 11 lb 8 oz x 1/2 oz
DISPLAY	0.55"(14 mm) LCD with 4 digits			
OPERATING TEMPERATURE	32°F to 104°F (0C to 40C)			
TARING RANGE	Full Scale			
POWER SOURCE	6 AA alkaline batteries or AC adapter (optional)			

## Quality construction

The SPC series scale is constructed with industrial quality components throughout to guarantee trouble-free operation under demanding conditions. The sturdy stainless steel housing and tactile keyboard are splash proof and USDA accepted.


## Easy to read

The large (0.55") LCD display is easy to read under any lighting condition, whether standing up or sitting down. Weights are displayed within a fraction of a second.

## Three button keyboard

The keyboard has three tactile keys that are used to reset the scale to zero, change the unit of weight and to turn power on and off.

## Dimensions

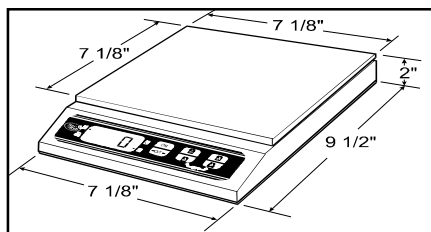

## Flexible

A "dual-range" system used in these scales permits fine weight readings in increments as small as 1 g and 0.002 lb. Switch between lb and g at the push of a button. Switch between fractional lb, decimal lb and decimal ounce settings at the flip of a switch.

The same weight displayed in four different modes:



896 grams



1.975 pounds



31.6 ounces



1 pound 15 and 5/8 ounces

# Yamato

**YAMATO CORPORATION**  
1775 S. Murray Blvd.  
Colorado Springs, CO 80916 USA  
Tel (719) 591-1500 Fax (719) 591-1045

**YAMATO TECH CORPORATION**  
#112-19425 Langley By-Pass  
Surrey, B.C. V3S 6K1 Canada  
Tel (604) 533-2338 Fax (604) 533-0827