


BDS Series

Stainless Steel Bench Dial Scales

A rugged, waterproof bench-dial scale ...

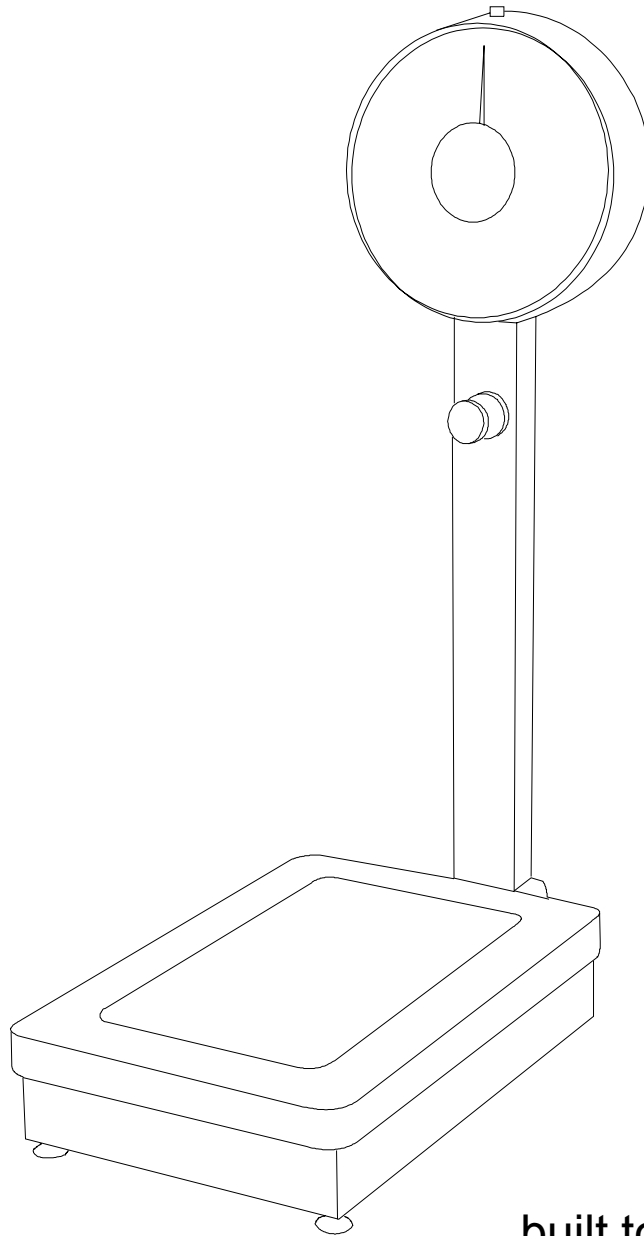

...built to last!

Yamato

BDS Series

Stainless Steel Bench Dial Scales

- **All Stainless Steel Construction!**
- **Large 20" x 15" Base!**
- **Ceramic Pivots and Bearings!**
- **100% Waterproof!**

Yamato Corporation introduces the new BDS Series Stainless Steel Bench Dial Scales. The BDS is a stainless steel, waterproof scale that is perfect for use in fisheries, poultry factories, or any wet environment.

Accurate, Sealed Head Unit

To insure the greatest possible accuracy, all models feature a temperature compensated spring mechanism. To guarantee that the spring mechanism stays in good condition, the head unit is sealed by a rubber gasket. This keeps all the internal components safe from a wet environment.

Dual Face

The BDS incorporates a dual face indicator head for increased versatility. Workers can see the weight indication from almost any position.

Rugged, Dependable

Ceramic pivots and bearings; unbreakable stainless steel construction; precision crafted pinion and rack. All components are of the highest quality for troublefree performance. The BDS, with its stainless steel design, and

ceramic pivots and bearings, will last for years.

Fast, Easy to Use

No weights to handle, and no calculations. Direct readings translate to a minimum number of operator errors. A quick tare device and a locking device make using the BDS a snap.

Model	Capacity
BDS-60PK	60 lb x 2 oz 30 kg x 50 g
BDS-125PK	125 lb x 4 oz 60 kg x 100 g
BDS-220PK	220 lb x 8 oz 100 kg x 200 g

Limited Warranty

Comprehensive one year limited warranty (subject to our standard terms and conditions) against defects in parts and workmanship under normal conditions of installation, maintenance, and usage.

Service and Maintenance

Service and maintenance are available through hundreds of *Accu-Weigh Dealers in the United States and Canada.

Yamato

YAMATO CORPORATION

P.O. Box 60159
Colorado Springs, CO
80960-0159 U.S.A.
Phone (719) 527-1500
Fax (719) 576-0498

YAMATO TECH CORPORATION

#112-19425 Langley By-Pass
Surrey, B.C. V3S 6K1
Canada
Phone (604) 533-2338
Fax (604) 533-0827